

2MP USB Visualiser



The home of inspirational and innovative resources for **Primary & Early Years**

Disclaimer

Thank you for choosing our 2MP USB Visualiser. Please read this manual carefully before use. The information contained in this document is subject to change without notice.

Notice:

1. Please don't leave the equipment under the sun or close to any heating objects.
2. If the scanner needs to be cleaned, please first clean it with a neutral detergent using a wet cloth before drying with a clean, dry cloth. Please do not try to clean with volatile solvents such as paint thinner, white spirit, etc. and do not submerge the scanner in water.
3. Do not store the scanner in humid or dusty locations. Safe working environment conditions are:
Temperature: 0C-40C(32F-104F)
Humidity: 30%-85% (No condensation)
4. Please be carefully of the head of scanner when you use it.
5. Please don't stare at the LED light closely, it may hurt your eyes.



WARNING!

Choking hazard - small parts not suitable for children under 3 years.
This product contains magnets. Seek medical attention if swallowed.

Hardware Introduction

Product Drawing




Model: 2MP USB visualiser

- (1) Indicator Light: power light
- (2) Bearing: to open or fold the scanner
- (3) LED Touch Button: to turn on/off LED lights
- (4) Auxiliary Light: 5 white LED lights
- (5) Main Camera: to capture video or image
- (6) USB Port: port for USB cable
- (7) Base: to let the scanner stand steadily

Connection Diagram, Packing & Accessories

Connection Diagram

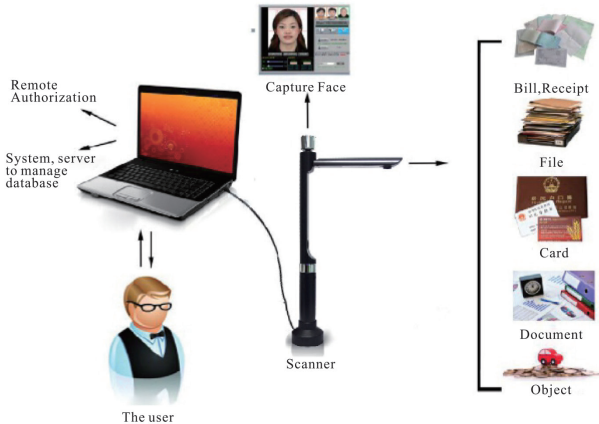

Packing & Accessories

- (1) Scanner
- (2) Rolling Pad
- (3) USB 2.0 Cable
- (4) Installation CD-ROM
- (4) User's Manual

Product Specification

Parameter

No.	Spec.		2MP USB Visualiser
1	Reso.	Main	1600 x 1200
2	Scan material		Doc, Book, Card, Passport, 3D Object, etc.
3	Max. size		A4
4	Scan speed		1S
5	Focus		Fixed focus
6	FPS		2 mega: 7Fps VGA: 15Fps
7	Colour depth		24 bit
8	Image control		Brightness, Exposure, Saturation, Contrast
9	Image format		JPG, TIF, BMP, PNG
10	Video format		AVI, WMV
11	Sensor		CMOS
12	Light		Natural light, LED light
13	Driver		Driverless
14	MIC		No
15	Interface		No
16	USB port		USB 2.0
17	Power		USB 5V



Software Installation

System Requirements

Windows:

- Windows/Intel Compatible Personal Computer 1.0 Ghz Pentium Minimum
- CD-ROM Drive
- 512 MB RAM or above
- USB 2.0 Port
- Microsoft Windows XP/ Windows Vista/ Windows 7 / Windows 8// Windows 10

*Higher requirements might be needed when scanning or editing a large quantity of image data. The system requirements here are only a guideline. For best results, it is recommended to have a large memory and fast processor.

Software installation

Before installation, please temporarily close any anti-virus software, and connect the scanner to a computer via USB cable, then insert the CD-ROM that comes with your scanner into the CD-ROM drive.

Software installation steps

Step 1: Copy the software from the CD to your computer.

Step 2: Install the software in the computer.





